


Instructions for LD-5 Firmware Update

1. Download Updatefirmware 1.04.exe and save to your PC or Laptop.
2. Update the appropriate firmware file (.fw extension).
3. With your LD-5 powered off, connect your LD-5 and PC/Notebook using a USB cable.
4. Prepare LD-5 for update by pressing and holding the MENU button and pressing the ON/OFF button. Hold the MENU button for approx. 4 seconds. The LD-5 screen should read "Update Firmware! Bootloader v1.0". Your LD-5 is now ready to accept the new firmware.
5. Double-click to execute the Updatefirmware1_0_4.exe program.

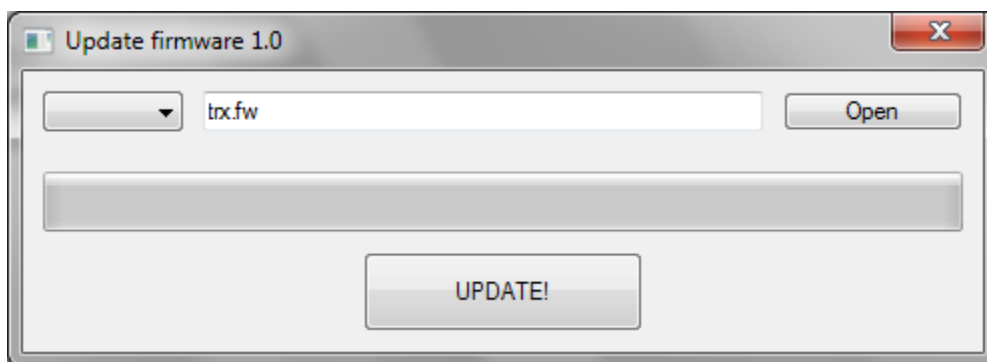

6. Select the first pull-down menu to select the appropriate COM port that your USB cable is connected to.
7. Click on OPEN and browse your PC/Notebook to select the appropriate firmware (.fw) file you wish to apply.
8. Press UPDATE! The process to update the firmware will take about 2 minutes and 20 seconds.
9. When finished, you will get a confirmation saying Device update! press OK.
10. Disconnect the USB cable and power cycle the LD-5.